


PROCEDURES>70 FITTINGS >7005 PASSENGER COMPARTMENT FR...>7005A FRONT DOOR ASSEMBLY >7005A28 FRONT SIDE DOOR LIMITER - R.R.

ALFA 159

- Technical Data
- Descriptions
- Fault diagnosis
- Test
- Procedures
- Electrical equipment

ALFA 159 1.9 JTD 16V FRONT SIDE DOOR LIMITER - R.R. 7005A28

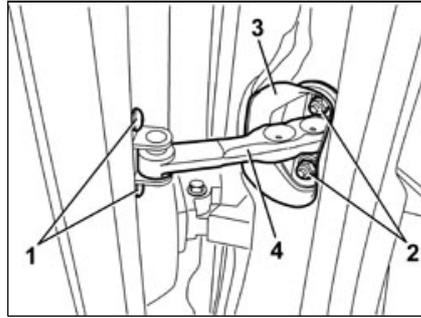

Removing ([Refitting](#))

1. Unscrew the bolts on the door.
2. Unscrew the nuts on the body.
3. Release the seal.
4. Remove the limiter by extracting from inside the car.

Refitting ([Removing](#))

- Check that the limiter and the seal are not damaged.
- Place the limiter in its seat.
- Tighten the nuts to the body to the recommended torque.

Component	Fastening	dia	Value (daNm)	Validity
DOOR CHECK STRAP	Nut	M6	0.7 1.1	÷

- Fit the seal.
- Tighten the door bolts to the specified torque.

Component	Fastening	dia	Value (daNm)	Validity
DOOR CHECK STRAP	Bolt	M6x22	0.7 1.1	÷

- Check the operation of the limiter.